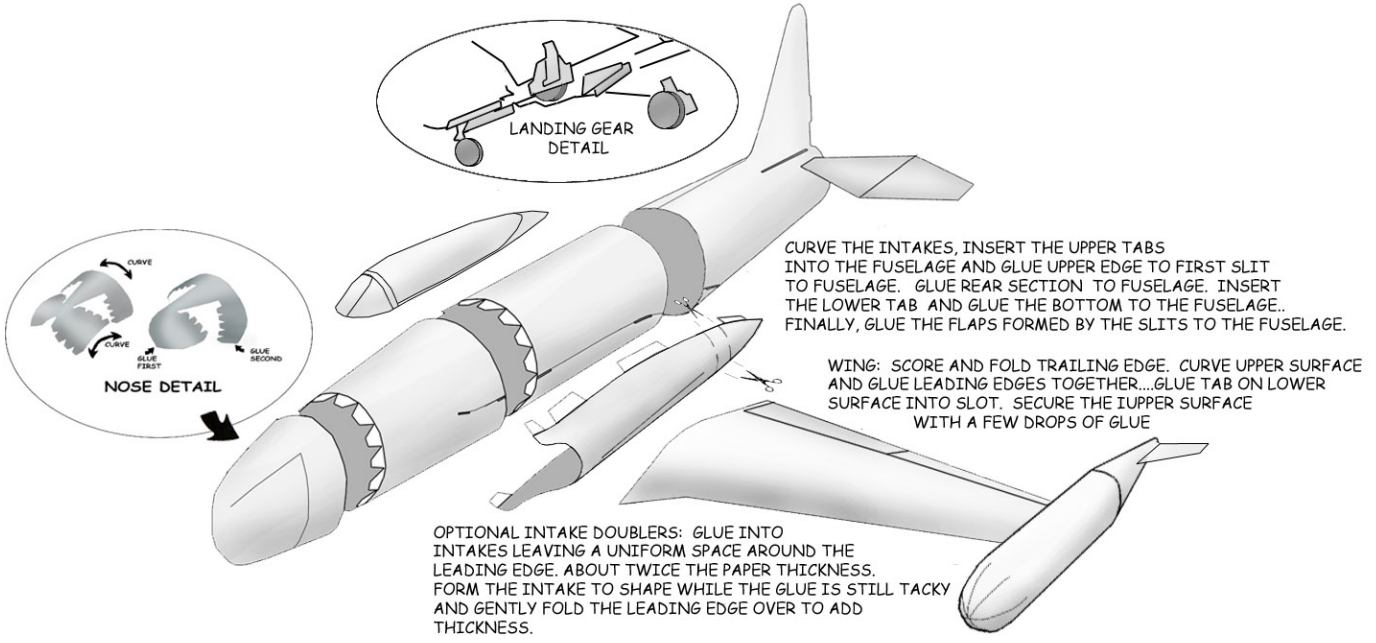
LANDING GEAR
DETAIL
CURVE
CURVE
GLUE
FIRST
GLUE
SECOND
NOSE DETAIL
CURVE THE INTAKES, INSERT THE UPPER TABS
INTO THE FUSELAGE AND GLUE UPPER EDGE TO FIRST SLIT
TO FUSELAGE. GLUE REAR SECTION TO FUSELAGE. INSERT
THE LOWER TAB AND GLUE THE BOTTOM TO THE FUSELAGE..
FINALLY, GLUE THE FLAPS FORMED BY THE SLITS TO THE FUSELAGE.
WING: SCORE AND FOLD TRAILING EDGE. CURVE UPPER SURFACE
AND GLUE LEADING EDGES TOGETHER....GLUE TAB ON LOWER
SURFACE INTO SLOT. SECURE THE IUPPER SURFACE
WITH A FEW DROPS OF GLUE
OPTIONAL INTAKE DOUBLERS: GLUE INTO
INTAKES LEAVING A UNIFORM SPACE AROUND THE
LEADING EDGE. ABOUT TWICE THE PAPER THICKNESS.
FORM THE INTAKE TO SHAPE WHILE THE GLUE IS STILL TACKY
AND GENTLY FOLD THE LEADING EDGE OVER TO ADD
THICKNESS.